





222 Bolivar Street
Canton, Massachusetts 02021 USA
TEL: 781-562-0475
sales.desk@telescada.com

NexVar

CAPACITOR CONTROL




A REVOLUTION IN
DISTRIBUTION CAPACITOR CONTROL





A revolution in Distribution Capacitor Control, the Telescada NeXVar™ Capacitor Control incorporates a simple-to-use, intuitive touchscreen to view control status and real time information. The NeXVar's ™ wide angle, full color display makes obsolete the ancient blinking lights, rotary dials, toggle switches and 2 line displays of old fashioned capacitor controls.

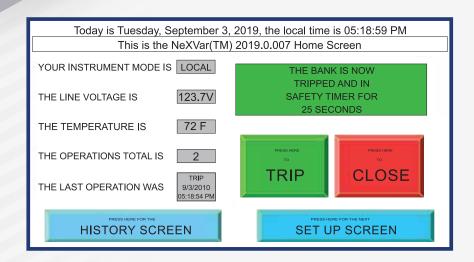


Autonomous Capacitor Control Functions & Capacitor Bank Monitoring

- Voltage Control
- Temperature Control
- Time of Day Control
- Var Control
- Neutral Current Monitoring
- 3 ⊕ Voltage, Current and Var Measurement

2-Way Wireless Distributed Control


- DNP
- Modbus RTU & ASCII

Quickly and easily view and modify autonomous Capacitor Control schemes and Control functionality or choose from a library of pre-set, 1-click Control "personalities" TM

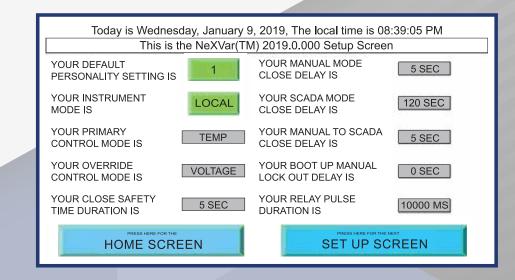

Password protected
Bluetooth and WiFi
connectivity makes
viewing, modifying
and controlling the
NeXVar™ a snap,
with your smart phone
or tablet without
leaving your vehicle.



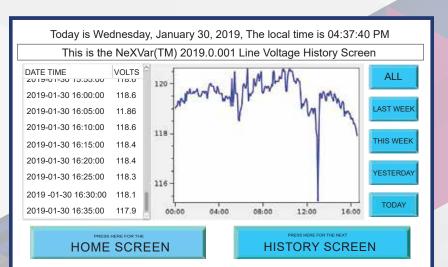

Real time and historic data logging of all monitored parameters at the touch of your instrument screen.







Seamless SCADA integration via DNP protocol using the most popular 2-way wireless transceivers.



